

## AE-03: Order Rastar Print (Mossville)

### SAFETY FIRST

- Follow all Caterpillar facility safety standards when performing this task.

### EQUIPMENT

- Dec keyboard
- Rastar printer

### RESOURCES

- user's guides available in the shop
- help screens

### Order Rastar Print

- 1. From the TRS System type IBM, then press <Enter>.**
- 2. Type CN, then press <Enter>.**
  - This is the Caterpillar Network code.
- 3. Type Z1C2, then press <Enter>.**
  - This is the code to get to the Rastar system.
- 4. Log On.**
  - Enter your Username and Password.
- 5. Type "1" from the Rastar Main Menu, then press <Enter>.**
  - This selects "List – List Graphics Directory"
- 6. Type B for gage or C for PX.**
  - Press <PF9> for the document classes list.
- 7. Type the tool number from the Repair ticket or Tool Design Process Sheet, then press <Tab> four times to get to the FAC field.**
- 8. Type the facility number you are in and press <Enter>.**

9. Press "P" (for Print), and <Enter>.
10. Select the print according to your needs.
  - Assembly sheet = 000, or enter the number according to the detail specified on the assembly print.
  - Retrieve the print.



Rastar Printer

11. Press the <Ctrl> key and the Z key together, to back out to the IBM Utility Menu.
12. Press the <PF4> key to exit.
13. Press <Enter> to return to the Mossville Main Menu.